


NOVA FPH SERIES DOCK SEAL

INSTALLATION INSTRUCTIONS

(Right or left — read from outside facing building)

- 1. DETERMINE CENTERLINE OF DOOR OPENING ON DOCK FLOOR AND POSITION OF FPH HOOD OUTER EDGES:** Take 1/2 of the hood width and mark this distance on both sides of the centerline on the door opening.
- 2. ATTACH MOUNTING BRACKETS TO SIDE PADS:** Attach three (3) pairs of brackets per pad using lag screws provided.
- 3. MOUNT SIDE PADS TO WALL:** Outside edge of side pads should be placed on mark while bottom of backing is flush with dock floor. Be sure pads are plumb from top to bottom.
- 4. MOUNT 2X4 HEAD FRAME TO WALL:** Fits above and flush with outside edge of side pads.
NOTE: Three (3) anchors recommended—one middle and one near each end.
- 5. INSERT STEEL TUBE IN HEAD CURTAIN**
- 6. FASTEN HOOD TO HEAD FRAME AND OUTSIDE PADS:** Galvanized roofing nails are provided and should be fastened approximately 6-inches apart.
- 7. CAULK BETWEEN HEAD FRAME AND WALL:** Outside edges only. A silicone or butyl rubber caulk is recommended.

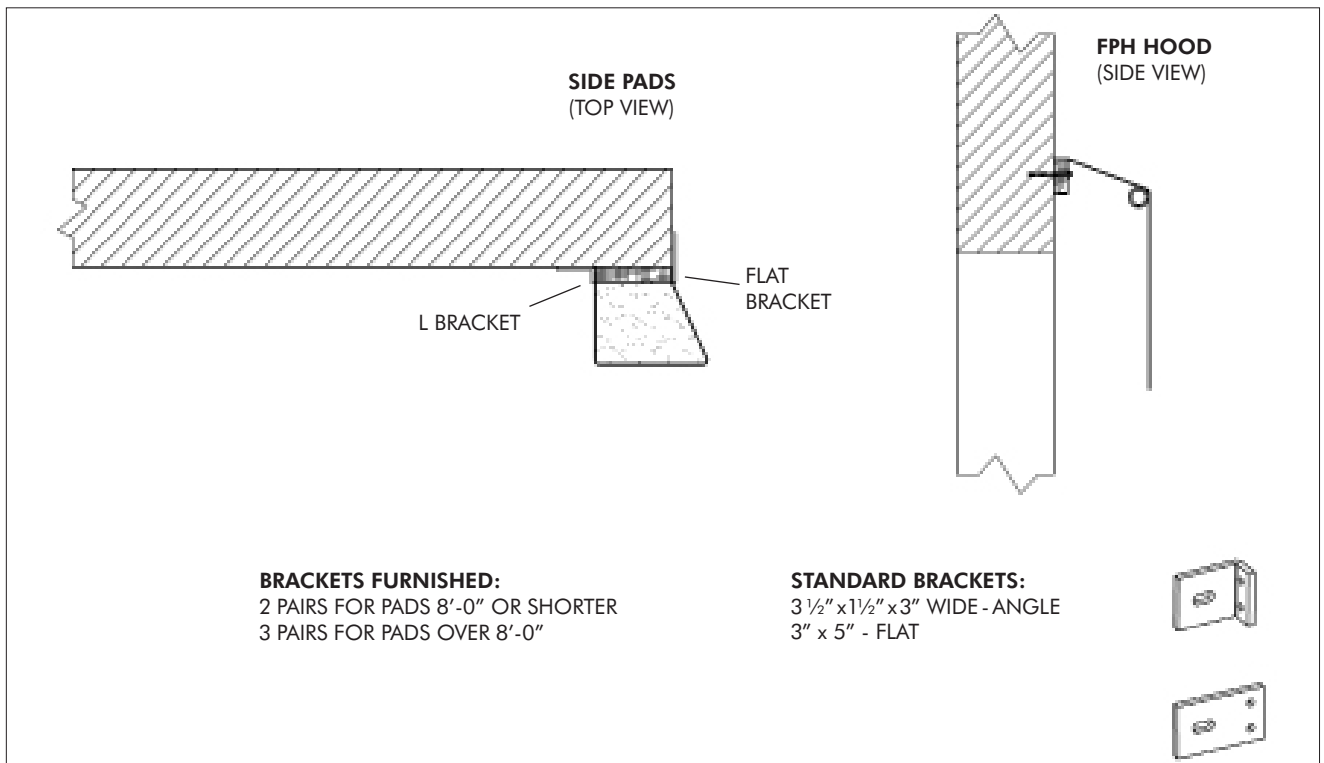

SUGGESTED MOUNTING METHODS

(Mounting anchors not included)

CONCRETE BLOCK OR BRICK WALL: Try to hit mortar joints. Use 1/2-inch or 3/8 x 4-inch expansion anchors. Use through bolt fastening (minimum two per frame member) if anchors will not hold—3/8-inch threaded rod is recommended.

PRECAST CONCRETE: Same as above.

METAL SKIN BUILDING: Through bolt fastening as above. Use a back up plate (steel or wood) to support bolts or anchor through existing building girt or purlin when possible.



NOVA FPH SERIES DOCK SEAL

INSTALLATION INSTRUCTIONS

FPH SERIES TYPICAL ARRANGEMENT

