


# NOVA SEAL PULL ROPE SYSTEM

## INSTALLATION INSTRUCTIONS

### OPTIONAL PULL ROPE SYSTEM FOR FPH SEAL

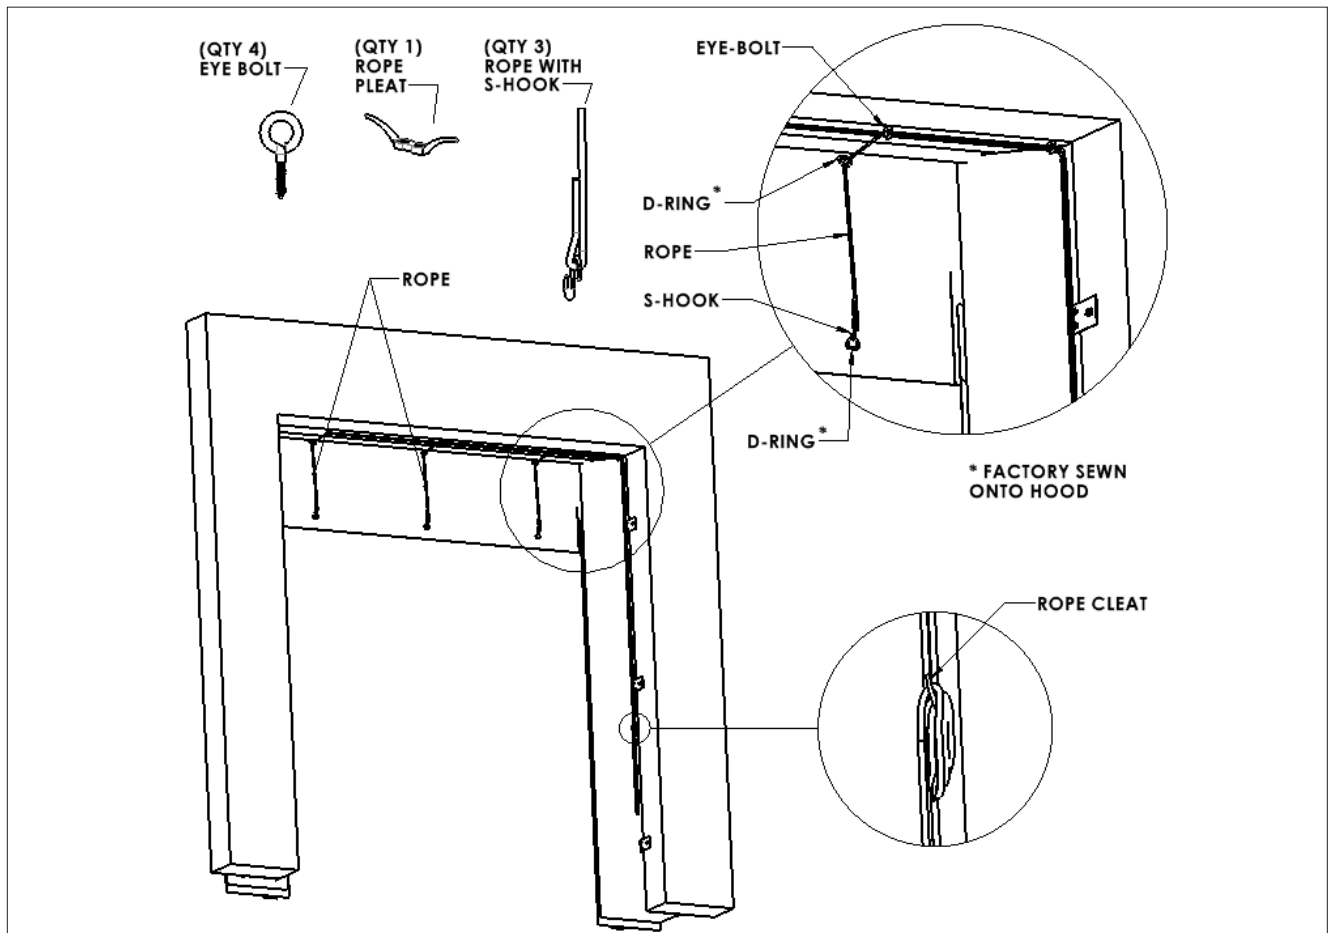

- 1. DETERMINE SIDE TO USE PULL-ROPE SYSTEM:** Either left or right side is acceptable.
- 2. MOUNT ROPE CLEAT:** Use screws to attach the rope cleat to the inside face of the side pad wood approximately 4' up from bottom of side pad.
- 3. ATTACH FIRST EYE BOLT:** On the same side as the rope cleat mount an eye bolt 2 inches away from the side pad and on the bottom of the 2X4 head frame.
- 4. ATTACH 3 REMAINING EYE BOLTS:** Mount eye bolts directly behind the (3) top D-rings on the bottom of the 2X4 head frame.
- 5. THREAD FIRST ROPE:** Attach the S-hook to the bottom D-ring furthest away from the rope cleat. Feed the rope vertically up through the top D-ring and then through adjacent eye bolt. Now feed the rope horizontally through the remaining eye bolts allowing the excess rope to hand down from the corner eye bolt.
- 6. THREAD THE NEXT 2 ROPES:** Repeat the above step for the next 2 ropes.
- 7. CLOSE ENDS OF S-HOOKS:** Close the ends of the S-hooks with a pliers to ensure the (3) ropes remain fastened to the D-rings.
- 8. ADJUST VERTICAL ROPES:** 3 ropes can be knotte together if desired. Tie ropes to rope cleat and trim excess bottom rope as desired.

